# **MANI**

# Installation Manual





This LED Downlight Series is a custom-made series of LED Downlights by ELECTRON SA that Bridgelux LED

 
#### Safety Rules (Attention):

- Do not install the LED Downlights near flammable liquid, materials or surfaces.
- Do not subject the LED Downlights to excess weight.
- Avoid looking directly into the LED light beam at close range.
- · Clean, when needed, the front transparent cover with a dry cloth. Remove any dirt only with water and alcohol free cleaning products.
- Operation in general ambient temperature up to 35°C.
- ELECTRON S.A. is not responsible for any damage or injury caused by incorrect or improper use of the product.

#### Safety Rules (Attention):


- Before installation or maintenance, make sure electricity is switched off at the mains.
- · Install and operate in places where there is sufficient airflow to keep the module to acceptable temperature levels.
- Cut correct size hole in ceiling given the dimensions below.
- Make sure the correct driver is used.
- Make sure the driver lies adjacent to the fitting.
- Refer to driver specifications if you need relevant information.
- Installation only by a qualified electrician.

### **Indicative Dimensions:**

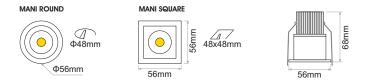


**Note:** Dimensions of drivers change depending on the model. Please contact your supplier or ELECTRON SA for relative information.


#### Installation:

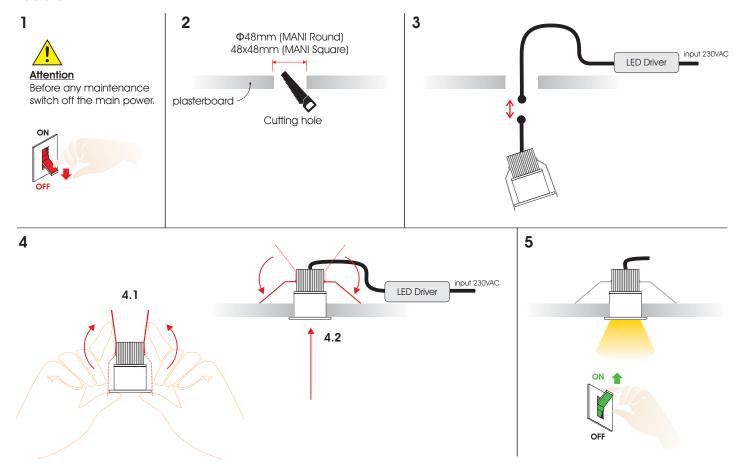



## Typical LED driver connections

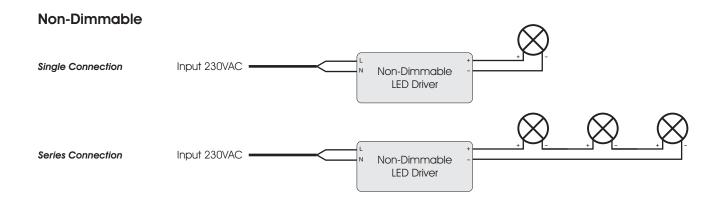

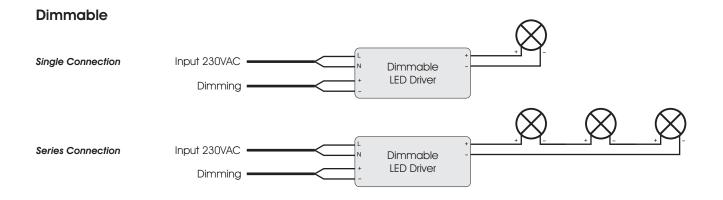

### CAUTION!

For all connections make sure that the total load is within the safe operating area of the driver's output.

ELECTRON S.A. is not responsible for any damage or injury caused by incorrect or improper use of the equipment. Any reproduction by means or whole of this user's manual in any way is prohibited without the written consent of ELECTRON S.A. ELECTRON S.A. reserves the right to change or alter any information contained in this manual without prior notice. Errors and omissions excepted.

