
GRETTO TR Φ58mm Installation Manual **GRETTO WASH** GRETTO **GRETTO DIFFUSED** 90mm **Attention** Before any maintenance switch off the main power. 3 Place the housing box. 2.1 Open the luminaire hole. 2.2 Open a hole near the luminaire hole for the IP68 Junction Box. 2.3 Then connect the 2 holes with a pipe. **Φ**88mm ~100mm 2.2 Junction Box 2.1 hole Luminaire hole 2.3 Then connect 250mm the 2 holes with a pipe Pipe Drainage System Gravel 5 Pass the cable of GRETTO TR from the housing box Fill the luminaire hole with concrete. Then wait until it gets dry. 4 to the Junction Box and make the connections. Warning: GRETTO RC Series can be Outer cable diameter: 6~8mm equipped with a led driver of IP67 LED DRIVER 48VDC or 24VDC. Please pay attention to the 曰 power supply of the led driver 24V or 48V concrete concrete according to your specific model. IP68 **Junction Box** ON 7 6 Place a material of your desire to close the Junction Box hole. OF IP68 IP68 **Junction Box Junction Box**



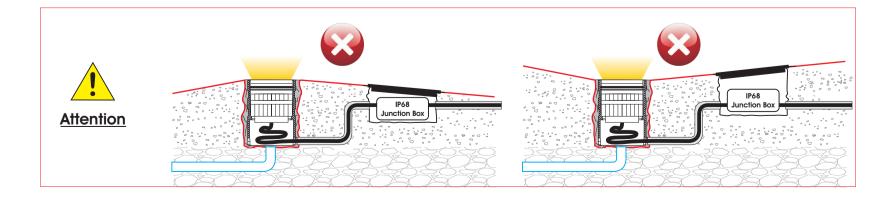

ELECTRON SA, PROFESSIONAL LIGHTING SYSTEMS 68 Antiohias Str, N. Philadelphia, 143 41 Athens, Greece, Tel. +30 210 2584240, Fax. +30 210 2584245, info@electron.gr, www.electron.gr