

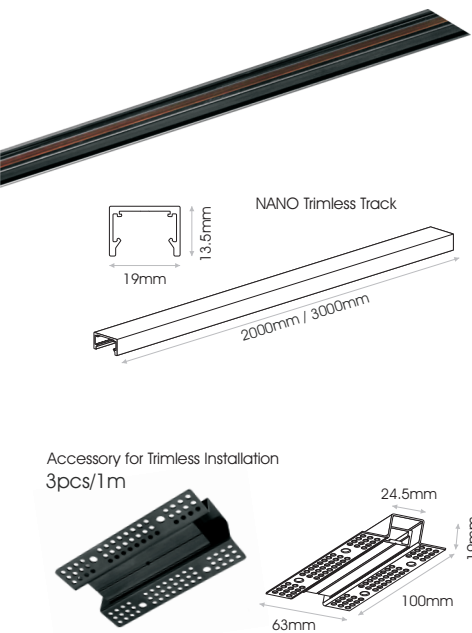
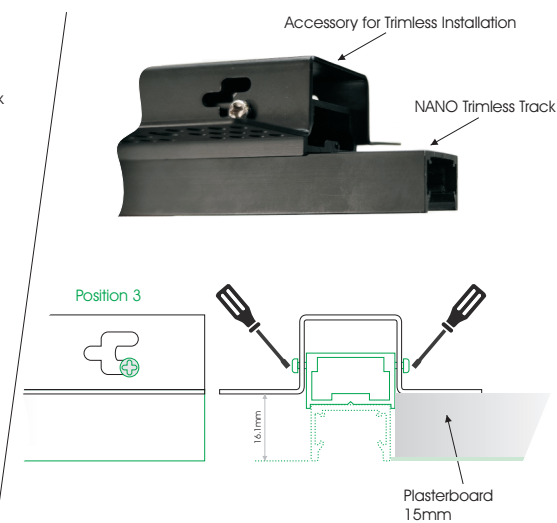


NANO Trimless Track


Installation Manual

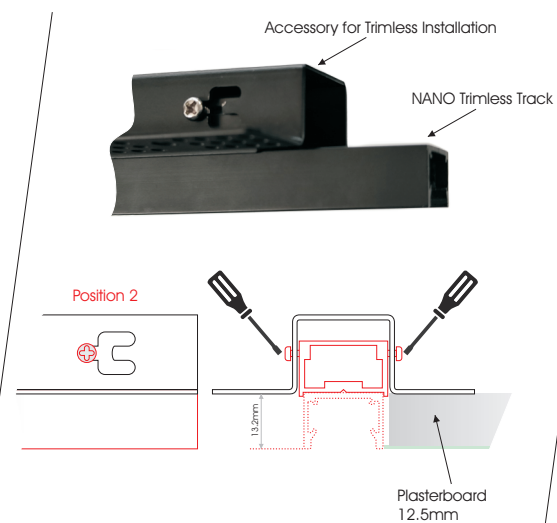


1 Choose the right position according to the plasterboard thickness.

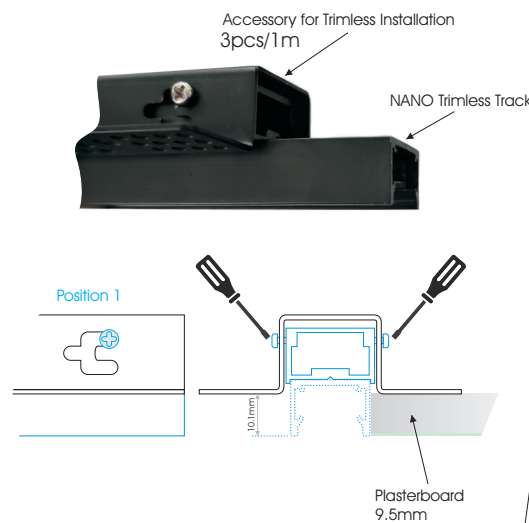


2

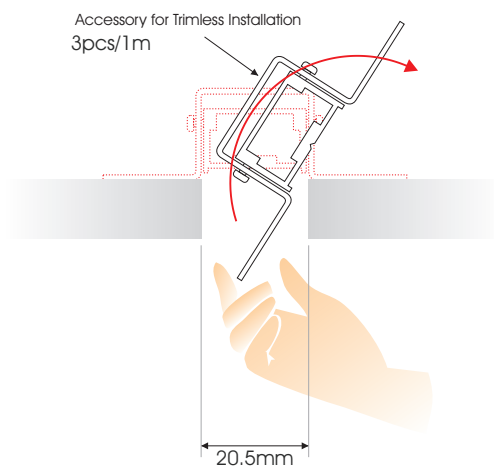

3

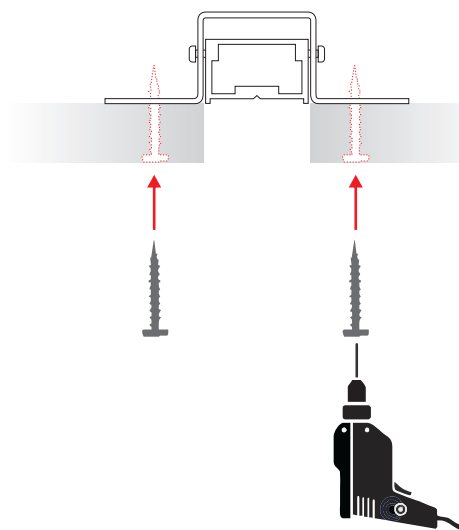

4

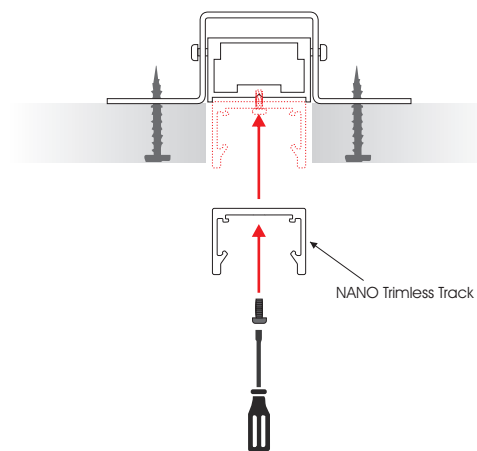

5

